

# ProVisionaire Control / ProVisionaire Touch Compatibilities

Update: July, 2023

Please make sure to use the appropriate version of software and firmware, referring to the following compatibility charts. Using an unsupported combination may result in malfunction.

ご使用の際は下記対応表を参照のうえ、互換性のあるバージョンをご使用ください。互換性のないバージョンを組み合わせ使用した場合、誤動作の原因になることがあります。

## ProVisionaire Control

ProVisionaire Control	ProVisionaire Control KIOSK	DME7	MTX3 MTX5-D MR37-D EXi8 EXo8	RIVAGE PM Series		CL Series QL Series	DM7 Series	DM3 Series	TF Series	Rio-D2 Series	Rio Series	Tio1608-D	VXL1-16P	DZR Series DXS XLF Series		PC-D Amplifier	XMV Amplifier		NEXO NXAMP		ADECIA		ProVisionaire Control	ProVisionaire Control KIOSK		
				DM7 DM7 Compact	DM3 DM3 Standard		TF5 TF3 TF1 TF-RACK	Rio3224-D2 Rio1608-D2	Rio3224-D Rio1608-D Ri8-D Ro8-D	DZR315-D DZR15-D DZR12-D DZR10-D	DXS18XLF-D DXS15XLF-D			PC412-D PC412-DI PC406-D PC-406DI	XMV8280 XMV8140 XMV4280 XMV4140	XMV8280-D XMV8140-D XMV4280-D XMV4140-D	NXAMP4X2MK2 NXAMP4X1MK2	NXAMP4x4MK2	RM-CR RM-CG	RM-TT	RM-WAP-8					
3.12.0		V1.01 or later		V5.02 or later			V1.01 or later	V1.10 or later																V1.9.3 or later	3.12.0	
3.11.0																										
3.10.0																										3.10.0
3.9.0																										
3.8.0		Not supported	V3.10 or later	Not supported	V4.10 or later		not supported	not supported	V3.51 or later	V1.10 or later	V4.10 or later	V1.02 or later	V1.0.0 or later	V1.1.3 or later		V1.0.2 or later		V3.10 or later	LOAD4.23 or later	LOAD5_03 or later	V1.0.1 or later					3.8.0
3.6.0, 3.6.1, 3.7.0																										
3.5.0																										3.5.0
3.0.1, 3.0.0																										
1.0.0		not supported											not supported	not supported												1.0.0

ProVisionaire Control	ProVisionaire Control KIOSK	MusicCast Device	Blu-ray Player	Piano (Disklavier)	IDK Video Switcher				ProVisionaire Control	ProVisionaire Control KIOSK
					MSD-501 KIOSK MSD-502 MSD-701 MSD-702	MSD-S51 MSD-S52 MSD-S71 MSD-S72	MSD-6203/6203Dan MSD-6204/6204Dan MSD-6206/6206Dan MSD-6208/6208Dan	MSD-402		
3.12.0										3.12.0
3.11.0										
3.10.0										3.10.0
3.9.0										
3.8.0		not supported	not supported	not supported						3.8.0
3.6.0, 3.6.1, 3.7.0										
3.5.0										3.5.0
3.0.1, 3.0.0										
1.0.0		not supported								1.0.0

ProVisionaire Touch

ProVisionaire Touch	ProVisionaire Touch KIOSK	DME7	MTX3 MTX5-D MRX7-D EX18 EX08	RIVAGE PM Series		DM7 Series	DM3 Series	TF Series		Rio-D2 Series	Rio Series	Tio1608-D	VXL1-16P	DZR Series DXS XLF Series		PC-D Amplifier	XMV Amplifier		NEXO NXAMP		ADECIA			ProVisionaire Touch	ProVisionaire Touch KIOSK																								
				DSP-RX DSP-RX-EX DSP-R10 CSD-R7	CL Series QL Series	DM7 DM7 Compact	DM3 DM3 Standard	TF5 KIOSK TF3 TF1	TF-RACK	Rio3224-D2 Rio1608-D2	Rio3224-D Rio1608-D Ri8-D Ro8-D			DZR315-D DZR15-D DZR12-D DZR10-D	DXS18XLF-D DXS15XLF-D	PC412-D PC412-DI PC406-D PC-406DI	XMV8280 XMV8140 XMV4280 XMV4140	XMV8280-D XMV8140-D XMV4280-D XMV4140-D	NXAMP4X2MK2 NXAMP4X1MK2	NXAMP4X4MK 2	RM-CR RM-CG	RM-TT	RM-WAP-8																										
Not upgraded	3.12.0	V1.01 or later(Only KIOSK supported)		V5.02 or later		V1.01 or later (Only KIOSK supported)	V1.10 or later (Only KIOSK supported)																	V1.9.3 or later (Only KIOSK supported)	Not upgraded	3.12.0																							
	3.11.0																																													3.11.0			
3.10.0		V2.03 or later		V4.50 or later		Not Supported	Not Supported	V3.51 or later	V3.11 or later	V1.10 or later	V4.50 or later	V1.04 or later	V1.0.0 or later	V1.1.3 or later	V1.0.2 or later		LOAD5_03 or later	LOAD4_23 or later	V1.0.1 or later (Only KIOSK supported)	V1.2.0 or later	Not Supported			V1.9.3 or later (Only KIOSK supported)	3.10.0																								
3.9.0																																																3.10.0	
3.8.0																																																	3.9.0
3.6.0, 3.6.1, 3.7.0																																																	3.8.0
3.5.0																																																	3.6.0, 3.6.1, 3.7.0
3.0.0																																			V1.04 (only KIOSK supported)														3.5.0
2.1.0																																																	3.0.0
2.0.1																									Not supported																								2.1.0
2.0.0																																																	2.0.1
1.3.0																																																	2.0.0
1.2.5																																			not supported														1.3.0
1.2.0																																																	1.2.5
1.1.1, 1.1.0, 1.0.2, 1.0.1	-																																																1.2.0
1.0.0	-	V2.01, V2.02																								1.1.1, 1.1.0, 1.0.2, 1.0.1																							
																										1.0.0																							

ProVisionaire Touch

ProVisionaire Touch		MusicCast Device				Blu-ray Player		Piano (Disklavier)	IDK Video Switcher				ProVisionaire Touch		
		WXC-50 WXA-50	XDA-QS5400RK	CD-NT670 CD-NT670D	AV Receiver	BD-A1060	BD-S681	ENSPIRE PRO ENSPIRE ST	MSD-501 MSD-502 MSD-701 MSD-702	MSD-S51 MSD-S52 MSD-S71 MSD-S72	MSD-6203/6203Dan MSD-6204/6204Dan MSD-6206/6206Dan MSD-6208/6208Dan	MSD-402	MSD-701UHD	ProVisionaire Touch	ProVisionaire Touch KIOSK
Not upgraded	3.12.0	Please use the latest firmware.	Ver1.16 or later	Please use the latest firmware.	Please use the latest firmware.	Ver.1.23 or later	Ver.1.24 or later	Please use the latest firmware.	V1.00 or later	V1.00 or later	V1.02 or later	V1.22 or later	V1.05 or later	Not upgraded	3.12.0
	3.11.0														3.11.0
3.10.0 or later														3.10.0 or later	
3.9.0														3.9.0	
3.8.0														3.8.0	
3.6.0, 3.6.1, 3.7.0														3.6.0, 3.6.1, 3.7.0	
3.5.0														3.5.0	
3.0.0														3.0.0	
2.1.0														2.1.0	
2.0.1														2.0.1	
2.0.0														2.0.0	
1.3.0														1.3.0	
1.2.5														1.2.5	
1.2.0														1.2.0	
1.1.1, 1.1.0, 1.0.2, 1.0.1	-													1.1.1, 1.1.0, 1.0.2, 1.0.1	
1.0.0	-	1.0.0		-											